

Contact ID Event Definition Codes

EVENT	DATA TYPE
ALARMS	
Medical Alarms -100	
100 Medical	Zone
101 Personal Emergency	Zone
102 Fail to report in	Zone
Fire Alarms -110	
110 Fire	Zone
111 Smoke	Zone
112 Combustion	Zone
113 Water flow	Zone
114 Heat	Zone
115 Pull Station	Zone
116 Duct	Zone
117 Flame	Zone
118 Near Alarm	Zone
126 Hold-up suspicion print	
Panic Alarms -120	
120 Panic	Zone
121 Duress	User
122 Silent	Zone
123 Audible	Zone
124 Duress – Access granted	Zone
125 Duress – Egress granted	Zone
126 Hold-up suspicion print	User
Burglar Alarms -130	
130 Burglary	Zone
131 Perimeter	Zone
132 Interior	Zone
133 24 Hour (Safe)	Zone
134 Entry/Exit	Zone
135 Day/night	Zone
136 Outdoor	Zone
137 Tamper	Zone
138 Near alarm	Zone
139 Intrusion Verifier	Zone
General Alarm -140	
140 General Alarm	Zone
141 Polling loop open	Zone
142 Polling loop short	Zone
143 Expansion module failure	Zone
144 Sensor tamper	Zone
145 Expansion module tamper	Zone
146 Silent Burglary	Zone
147 Sensor Supervision Failure	Zone
24 Hour Non-Burglary -150 and 160	
150 24 Hour Non-Burglary	Zone
151 Gas detected	Zone
152 Refrigeration	Zone
153 Loss of heat	Zone
154 Water Leakage	Zone
155 Foil Break	Zone
156 Day Trouble	Zone
157 Low bottled gas level	Zone

EVENT	DATA TYPE
158 High temp	Zone
159 Low temp	Zone
161 Loss of air flow	Zone
162 Carbon Monoxide detected	Zone
163 Tank level	Zone
SUPERVISORY	
Fire Supervisory -200 and 210	
200 Fire Supervisory	Zone
201 Low water pressure	Zone
202 Low CO2	Zone
203 Gate valve sensor	Zone
204 Low water level	Zone
205 Pump activated	Zone
206 Pump failure	Zone
TROUBLES	
System Troubles -300 and 310	
300 System Trouble	Zone
301 AC Loss	Zone
302 Low system battery	Zone
303 RAM Checksum bad	Zone
304 ROM checksum bad	Zone
305 System reset	Zone
306 Panel programming changed	Zone
307 Self-test failure	Zone
308 System shutdown	Zone
309 Battery test failure	Zone
310 Ground fault	Zone
311 Battery Missing/Dead	Zone
312 Power Supply Over current	Zone
313 Engineer Reset	User
314 Primary Power Supply Failure	Zone
Sounder / Relay Troubles -320	
320 Sounder/Relay	Zone
321 Bell 1	Zone
322 Bell 2	Zone
323 Alarm relay	Zone
324 Trouble relay	Zone
325 Reversing relay	Zone
326 Notification Appliance Ckt. # 3	Zone
327 Notification Appliance Ckt. #4	Zone
System Peripheral Trouble -330 and 340	
330 System Peripheral trouble	Zone
331 Polling loop open	Zone
332 Polling loop short	Zone
333 Expansion module failure	Zone
334 Repeater failure	Zone
335 Local printer out of paper	Zone
336 Local printer failure	Zone
337 Exp. Module DC Loss	Zone
338 Exp. Module Low Batt.	Zone
339 Exp. Module Reset	Zone
341 Exp. Module Tamper	Zone
342 Exp. Module AC Loss	Zone
343 Exp. Module self-test fail	Zone
344 RF Receiver Jam Detect	Zone

EVENT	DATA TYPE
Communication Troubles -350 and 360	
350 Communication trouble	Zone
351 Telco 1 fault	Zone
352 Telco 2 fault	Zone
353 Long Range Radio xmitter fault	Zone
354 Failure to communicate event	Zone
355 Loss of Radio supervision	Zone
356 Loss of central polling	Zone
357 Long Range Radio VSWR problem	Zone
Protection Loop -370	
370 Protection loop	Zone
371 Protection loop open	Zone
372 Protection loop short	Zone
373 Fire trouble	Zone
374 Exit error alarm (zone)	Zone
375 Panic zone trouble	Zone
376 Hold-up zone trouble	Zone
377 Swinger Trouble	Zone
378 Cross-zone Trouble	Zone
Sensor Trouble -380	
380 Sensor trouble	Zone
381 Loss of supervision - RF	Zone
382 Loss of supervision - RPM	Zone
383 Sensor tamper	Zone
384 RF low battery	Zone
385 Smoke detector Hi sensitivity	Zone
386 Smoke detector Low sensitivity	Zone
387 Intrusion detector Hi sensitivity	Zone
388 Intrusion detector Low sensitivity	Zone
389 Sensor self-test failure	Zone
391 Sensor Watch trouble	Zone
392 Drift Compensation Error	Zone
393 Maintenance Alert	Zone
OPEN/CLOSE/REMOTE ACCESS	
Open/Close -400, 440, 450, 460	
400 Open/Close	User
401 O/C by user	User
402 Group O/C	User
403 Automatic O/C	User
404 Late to O/C (Note: use 453, 454 instead)	User
405 Deferred O/C (Obsolete- do not use)	User
406 Cancel	User
407 Remote arm/disarm	User
408 Quick arm	User
409 Keyswitch O/C	User
441 Armed STAY	User
442 Keyswitch Armed STAY	User
450 Exception O/C	User
451 Early O/C	User
452 Late O/C	User
453 Failed to Open	User
454 Failed to Close	User
455 Auto-arm Failed	User
456 Partial Arm	User
457 Exit Error (user)	User
458 User on Premises	User
459 Recent Close	User
461 Wrong Code Entry	Zone

EVENT	DATA TYPE
462 Legal Code Entry	User
463 Re-arm after Alarm	User
464 Auto-arm Time Extended	User
465 Panic Alarm Reset	Zone
466 Service On/Off Premises	User
Remote Access -410	
411 Callback request made	User
412 Successful download/access	User
413 Unsuccessful access	User
414 System shutdown command received	User
415 Dialer shutdown command received	User
416 Successful Upload	Zone
Access control -420, 430	
421 Access denied	User
422 Access report by user	User
423 Forced Access	Zone
424 Egress Denied	User
425 Egress Granted	User
426 Access Door propped open	Zone
427 Access point Door Status Monitor trouble	Zone
428 Access point Request To Exit trouble	Zone
429 Access program mode entry	User
430 Access program mode exit	User
431 Access threat level change	User
432 Access relay/trigger fail	Zone
433 Access RTE shunt	Zone
434 Access DSM shunt	Zone
435 Second Person Access	User
436 Irregular Access	User
BYPASSES / DISABLES	
System Disables -500 and 510	
501 Access reader disable	Zone
Sounder / Relay Disables -520	
520 Sounder/Relay Disable	Zone
521 Bell 1 disable	Zone
522 Bell 2 disable	Zone
523 Alarm relay disable	Zone
524 Trouble relay disable	Zone
525 Reversing relay disable	Zone
526 Notification Appliance Ckt. # 3 disable	Zone
527 Notification Appliance Ckt. # 4 disable	Zone
System Peripheral Disables -530 and 540	
531 Module Added	Zone
532 Module Removed	Zone
Communication Disables -550 and 560	
551 Dialer disabled	Zone
552 Radio transmitter disabled	Zone
553 Remote Upload/Download disabled	Zone
Bypasses -570	
570 Zone/Sensor bypass	Zone
571 Fire bypass	Zone
572 24 Hour zone bypass	Zone

EVENT	DATA TYPE
573 Burg. Bypass	Zone
574 Group bypass	User
575 Swinger bypass	Zone
576 Access zone shunt	Zone
577 Access point bypass	Zone
578 Vault Bypass	Zone
579 Vent Zone Bypass	Zone
TEST / MISC.	
Test/Misc. -600, 610	
601 Manual trigger test report	Zone
602 Periodic test report	Zone
603 Periodic RF transmission	Zone
604 Fire test	User
605 Status report to follow	Zone
606 Listen-in to follow	Zone
607 Walk test mode	User
608 Periodic test - System Trouble Present	Zone
609 Video Xmitter active	Zone
611 Point tested OK	Zone
612 Point not tested	Zone
613 Intrusion Zone Walk Tested	Zone
614 Fire Zone Walk Tested	Zone
615 Panic Zone Walk Tested	Zone
616 Service Request	Zone
Event Log -620	
621 Event Log reset	Zone
622 Event Log 50% full	Zone
623 Event Log 90% full	Zone
624 Event Log overflow	Zone
625 Time/Date reset	User
626 Time/Date inaccurate	Zone
627 Program mode entry	Zone
628 Program mode exit	Zone
629 32 Hour Event log marker	Zone
Scheduling -630	
630 Schedule change	Zone
631 Exception schedule change	Zone
632 Access schedule change	Zone
Personnel Monitoring -640	
641 Senior Watch Trouble	Zone
642 Latch-key Supervision	User
Misc. -650, 700, 900	
651 Reserved for ADEMCO Use	Zone
652 Reserved for ADEMCO Use	User
653 Reserved for ADEMCO Use	User
654 System Inactivity	Zone
703 Auxiliary #3	Zone
704 Installer Test	Zone
750-789 "User Assigned"	
796 Unable to output signal (Derived Channel)	Zone
798 STU Controller down (Derived Channel)	Zone
900 Download Abort	Downloader ID
901 Download Start/End	Downloader ID
902 Download Interrupted	Downloader ID
910 Auto-close with Bypass	Zone

EVENT	DATA TYPE
911 Bypass Closing	Zone
912 Fire Alarm Silence	
913 Supervisory Point test Start/End	User
914 Hold-up test Start/End	User
915 Burg. Test Print Start/End	
916 Supervisory Test Print Start/End	
917 Burg. Diagnostics Start/End	Zone
918 Fire Diagnostics Start/End	Zone
919 Untyped diagnostics	Zone
920 Trouble Closing (closed with burg. during exit)	User
921 Access Denied Code Unknown	User
922 Supervisory Point Alarm	Zone
923 Supervisory Point Bypass	Zone
924 Supervisory Point Trouble	Zone
925 Hold-up Point Bypass	Zone
926 AC Failure for 4 hours	Zone
927 Output Trouble	Zone
928 User code for event	User
929 Log-off	User