

VS2 Intelligent Life Safety System



Overview

The Vigilant VS2 intelligent life safety system offers the speed of high-end intelligent processing in a configuration that delivers an uncomplicated solution for small to mid-sized applications. With intelligent detection, electronic addressing, automatic device mapping, optional Ethernet® connectivity, and a full line of easily-configured option cards and modules, this quick-to-install system offers versatility that benefits building owners and contractors alike.

The VS2 provides one Class A or Class B analog device loop that supports up to 250 device addresses. A second 250-point loop may be added to the VS2 to expand total system capacity to up to 500 device addresses. The panel includes four NACs that may be wired for either Class A or Class B operation.

This life safety system features an attractive contemporary design that fits with any decor. Its gently curved doorfront offers a distinctive flair with available red or silver finishes. Controls are discreetly inset behind a striking black bezel.

The VS2 supports a wide range of accessories and related equipment, including:

- Intelligent modules, detectors, and bases
- R-Series remote annunciators
- option cards that expand system capacity and extend system capabilities.

Features

- Comes standard with one loop (expandable to two) that supports up to 250 (expandable to 500) intelligent devices: each VS2 loop supports up to 125 detectors and up to 125 modules.
- Four Class B NACs or two Class A NACs.
- Form C contacts for alarm and trouble, Form A for supervisory
- Electronic addressing with automatic device mapping
- Optional Ethernet port for diagnostics, programming and a variety of system reports
- Two programmable switches with LEDs and custom labeling
- Supports fire suppression routines with a dedicated intelligent releasing module
- Supports Genesis horn silence over two wires and UL 1971-compliant strobe synchronization
- Supports up to eight serial annunciators, (LCD, LED-only, and graphic interface).
- 1,000 event panel history log
- Can use existing wiring for most retrofit applications
- Supports V-Series single and multisensor detectors
- Upload/download remotely or locally
- Two-level maintenance alert reporting
- Pre-alarm and alarm verification by point
- Adjustable detector sensitivity
- 4 x 20 character backlit LCD display
- Optional earthquake hardening: OSHPD seismic pre-approval for component Importance Factor 1.5

Application

The VS2 life safety system is an easy-to-use intelligent solution for small to mid-sized buildings. Analog technology delivers the benefits of quick and uncomplicated system installation, while a clean and easy-to-operate user interface makes panel operation and system maintenance quick and intuitive.

The smart choice

Electronic addressing eliminates the tedium of setting dipswitches, and automatic device mapping ensures that each device resides on the system at its correct location. Meanwhile, innovative programming allows the designer to customize the system to precisely suit the needs of the building owner.

Versatility built right in

Two fully-programmable front panel switch/LED combinations provide an added measure of simplicity. Their slide-in labels take the mystery out of custom applications, and present a clean finished appearance.

Perfect for retrofits

The VS2 is particularly well-suited to retrofit applications. All connections are made over standard wiring – no shielded cable required. This means that in most situations existing wiring can be used to upgrade a legacy control panel to V-Series technology without the expense or disruption of rewiring the entire building.

Signals with a difference

VS2 NACs are configurable to fully support the advanced signaling capabilities of Edwards Genesis and Enhanced Integrity notification appliances. These devices offer precision synchronization of strobes to UL 1971 standards. For Genesis devices, enabling this feature allows connected horns to be silenced while strobes on the same two-wire circuit continue to flash until the panel is reset.

Clear-cut remote annunciation

Remote annunciation is a strong suit of the VS2. Up to eight annunciators can be installed on a single system. Compatible annunciators include a range of LED and LCD models that provide zone or point annunciation, as well as common control capabilities.


The VS2 also supports graphic annunciation with optional RA Graphic Annunciator interface modules. Each interface provides common control, indicators, and 32 LEDs. Consult the Ordering Information section for details.

A complete line of accessories

The VS2 life safety system is supported by a complete line of intelligent detectors, modules and related equipment. Consult the Ordering Information section for details.

Operation

The front panel provides an easy-to-use operator's interface, as well as all the necessary controls for front panel programming. A large back-lit 80-character LCD displays system status, event details, and programming prompts. Large tactile control buttons are easy to see in low light conditions, and bright multi-color LEDs offer at-a-glance status indication.

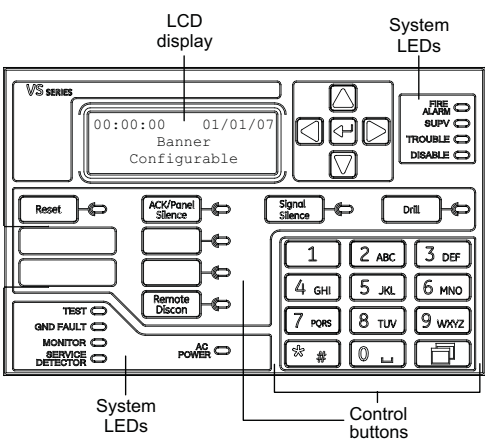

Control buttons

| Button | Description |
|----------------------|---|
| Reset | Initiates a system reset. |
| ACK/Panel Silence | Silences the panel and remote annunciators during an active trouble, supervisory, or alarm event and acknowledges new event activations. |
| Signal Silence | <i>Alarm mode:</i> Silences active notification appliances. Pressing Signal Silence a second time turns NACs back on. |
| Drill | Initiates a drill confirmation. Pressing drill a second time turns off the drill function. |
| Remote Disconnect | <i>Dialer:</i> Disables or enables dialer. <i>Dialer set to modem only:</i> Disables or enables the common alarm relay. |
| Left arrow | <i>Display mode:</i> Moves the cursor to the left. <i>Menu mode:</i> Toggles between programming selections. |
| Right arrow | <i>Display mode:</i> Moves the cursor to the right. <i>Menu mode:</i> Retrieves a programming option's sub menu and toggles between a programming option's selections. |
| Up arrow | <i>Display mode:</i> Advances to the previous event. <i>Menu mode:</i> Moves the cursor up. |
| Down arrow | <i>Display mode:</i> Advances to the next event. <i>Menu mode:</i> Moves the cursor down. |
| Enter | <i>Display mode:</i> Displays selected event details. <i>Menu mode:</i> Retrieves a programming option's sub menu or jumps to the Save function in the menu. <i>Entry mode:</i> Enters the selected data into the system. |
| Cancel | <i>Display mode:</i> Exits the detailed information display. <i>Menu mode:</i> Exits the current menu level. <i>Entry mode:</i> Clears the current entry. |
| Menu | <i>Display mode:</i> Enters the menu mode <i>Menu mode:</i> Exits menu mode |
| Space | Enters a space, such as a space between words. |
| Alphanumeric keypad | <i>Entry mode:</i> Pressing a button once enters the number on the button. Pressing the button twice enters the secondary value. |
| Programmable buttons | These buttons can be programmed to control outputs, disable devices or unlatch system outputs. The buttons can be labeled with a slip-in insert. |

System LEDs

| LED | Description |
|-------------------|---|
| Fire Alarm | Red LED. On steady when there is an active alarm. |
| Trouble | Yellow LED. Flashes when there is a fault on a monitored circuit or system component, or when a circuit is disabled. |
| Supv | Yellow LED. On steady when there is an active supervisory event. |
| AC Power | Green LED. On when the panel has AC power. |
| Disable | Yellow LED. Double-flashes when there is a disabled circuit or alarm relay. |
| Ground Fault | Yellow LED. On steady during an active ground fault. |
| Test | Yellow LED. Flashes when performing an audible walk test. Steady indicates a silent test. |
| Monitor | Yellow LED. On steady when there is an active monitor event. |
| Service Detector | Yellow LED. Indicates that detector needs servicing. |
| Signal Silence | Yellow LED. On steady indicates that NAC circuits are turned off but the panel is still in alarm. |
| Remote Disconnect | Yellow LED. On steady indicates that the dialer is disabled or that the alarm relay is enabled or disabled when the dialer is set to modem only. |
| Drill | Yellow LED. Indicates that the panel is in drill. |
| Reset | Yellow LED. Indicates that the panel is resetting. |
| Panel Silence | Yellow LED. Indicates that the panel has been silenced during an active trouble, supervisory, or alarm event and indicates that new event activations have been acknowledged. |
| User keys | Yellow LED. Programmable. |

Panel Operation Options

| | |
|----------------------------------|--|
| Language | English or French |
| Marketplace | U.S. or Canada |
| AC fail delay | <i>Off:</i> Off-premise notification of an AC power failure is immediate. <i>1 to 15 hours:</i> Delays the off-premise notification of an AC power failure by the time period selected. |
| Zone resound | <i>On:</i> NACs resound each time a device in the zone goes into alarm even if they were silenced <i>Off:</i> Inhibits the NACs from turning on again (after they were silenced) when a second device in the zone goes into alarm. |
| Reset inhibit after NACs turn on | <i>Off:</i> Panel reset is operational immediately. <i>1 minute:</i> Panel reset is inhibited for one minute. |
| Auto signal silence | <i>Off:</i> Allows immediate silencing of signals from an off-normal condition using the Signal Silence button <i>5 to 30 minutes:</i> Delays the silencing of signals from an off-normal condition by disabling the Signal Silence button for the time period selected. |
| Day start | Start time for daytime sensitivity |
| Night start | Start time for nighttime sensitivity |
| Date | MM/DD/YYYY, DD/MM/YYYY |
| Sounder Base | Six configuration settings |
| Mapping | <i>Disabled:</i> Device mapping is not available <i>Enabled:</i> Device mapping is available |
| LCD banner | Banner text for line one and line two. Each line is capable of up to 20 characters. |
| Event notification | <i>Zone:</i> When a device is a member of a zone, only the zone information is sent to the LCD display, LEDs, printer, and dialer. <i>Zone/device:</i> Zone information is sent to the LCD display and LEDs. Device information is sent to the printer and dialer. <i>Device:</i> Only device information is reported. |

Programming

V-Series panels are simple to set up, quick to program, and easy to maintain. The auto programming feature quickly gets the panel operational using factory default settings. Basic zone and point settings can be programmed easily through the front panel interface, so the system is up and running in no time.


For more advanced system configuration and correlation groups programming, V-Series panels interface to a PC running compatible VS-CU software. This option offers full system configuration in the familiar Windows® operating environment. Connection is typically made to a laptop through the panel's optional RS-232 communications port, which can also be used to connect a system printer.

Among the many innovations of the VS2 control panel is the optional network card. This module provides a standard 10/100 Base T Ethernet® network connection that permits access to the control panel from any remote location with the correct communications protocols. The connection can be used to download to the panel from the VS-CU, or upload and view system reports using the VS-CU.

Available system reports include:

- Correlation groups
- Device maintenance
- Internal status
- System status
- Dialer
- Device details
- History
- System configuration
- Walk test

Dimensions

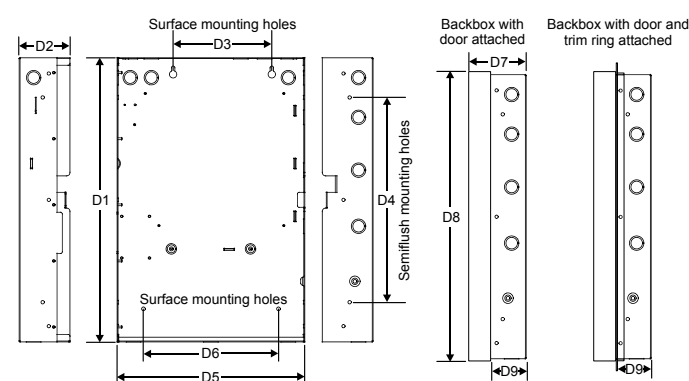

Backbox and backbox with door

| D1* | D2 | D3 | D4 | D5* | D6 | D7 | D8 | D9 |
|--------|-------|--------|--------|--------|--------|-------|--------|-------|
| 28.0" | 3.85" | 9.0" | 22.0" | 15.75" | 10.25" | 3.9" | 28.2" | 2.7" |
| 71.1cm | 9.8cm | 22.8cm | 55.8cm | 40.0cm | 26.0cm | 9.9cm | 71.6cm | 6.8cm |

* Add 1-1/2 in. (3.81 cm) to D1 and D5 dimensions for trim kit.


Wiring & Configuration

Notification appliance circuits (TB2)


V-Series control panels come equipped with two notification appliance circuits. Each circuit can be individually configured for continuous, temporal, synchronized, latching, and coded output.

| Circuit specifications | |
|------------------------|---|
| Circuit Type | 4 Class B or 2 Class A, 2.5 amps each |
| Voltage | 24 VFWR |
| Current | 6.0 A total, 2.5 A max. per circuit at 120/230 VAC 60 Hz 5.0 A total at 230VAC 50 Hz 2.5 A max. per circuit |
| Impedance | 26 Ω total, 0.35 μF max |
| EOLR | 15 K Ω, ½ W |

Class B wiring

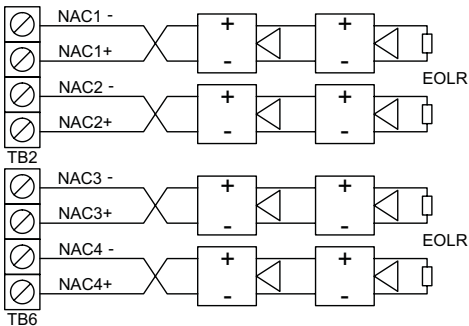

Class A wiring

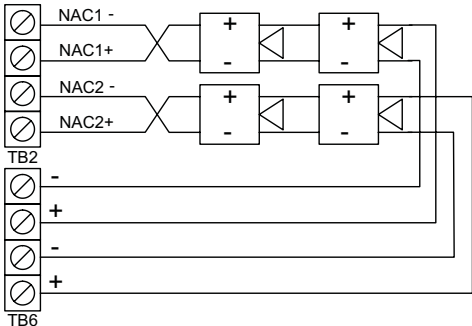

Marking indicates output signal polarity when the circuit is active. Polarity reverses when the circuit is not active. Wire notification appliances accordingly. Notification appliance polarity shown in active state.

Auxiliary & Smoke power outputs (TB3)

The control panel provides two auxiliary power outputs which can be used for powering ancillary equipment such as remote annunciators and two wire smoke detectors. Aux 2 can be software selected to operate continuous. The circuit is supervised for shorts and grounds.

Note: For a complete list of devices that can be connected to this circuit, refer to the VS Series Compatibility List.


| Circuit specifications | |
|----------------------------------|---|
| Circuit voltage range | 21.9 to 28.3 V |
| Resettable circuit (Aux power 2) | 24 VDC nominal at 500 mA |
| Continuous circuit (Aux power 1) | 24 VDC nominal at 500 mA. Use this circuit for powering two-wire smoke detectors. |

Note: Any current above 0.5 amp connected to both Aux 1 and 2 will reduce the total available NAC power by that amount.

Device loop

The control panel provides one device loop circuit that can support 125 detectors and 125 module addresses. The loop circuit is supervised for opens, shorts, and grounds.

| Circuit specifications | |
|----------------------------|--|
| Device loops | 1 loop, expandable to 2, Class A or B, each loop supporting up to 250 device addresses |
| Communication line voltage | Maximum 20 V peak-to-peak |
| Circuit current | 0.5 A max |
| Circuit impedance | 66Ω total, 0.5 μF, max |
| Isolators | 64 maximum |

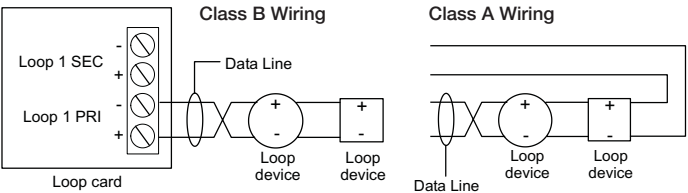


Annunciator loop (TB4)


The control panel provides a connection for up to eight serially driven and supervised remote annunciators.

| Circuit specifications | |
|------------------------|--|
| Device loops | Class B (Style Y) or Class A (Style Z) |
| Circuit voltage | 2.55 V |
| Circuit current | 30 mA max |
| Circuit impedance | Up to 8 annunciators or 4000 feet |

Class B

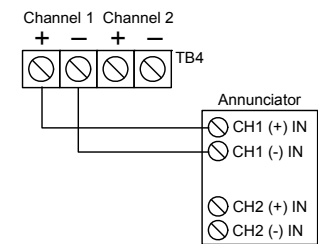

Class A

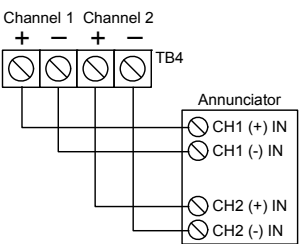

Alarm, trouble, and supervisory relay (TB3)

The trouble relay is normally-open, held closed, and opens on any trouble event or when the panel is de-energized. The supervisory relay is normally-open, and closes on any supervisory event. The alarm relay changes over on any alarm event.


| Relay specifications | | | |
|----------------------|-------------------------|-------------------------|-------------|
| | Alarm | Trouble | Supervisory |
| Type | Form C | | |
| Voltage | 24 VDC at 1 A resistive | 24 VDC at 1 A resistive | |

Relay circuits can only be connected to power-limited sources.

Option Cards

V-Series panels are supported by a complete line of modules and related equipment that enhance performance and extend system capabilities. Option cards are easy to install and set up. They simply plug directly into the control panel main circuit board or are connected to it with a ribbon cable. After installation, terminals remain easily accessible for quick connection of field wiring. The cabinet provides ample room for wire routing, keeping wiring neat and easy to service at all times.

SA-ETH Ethernet Interface Card

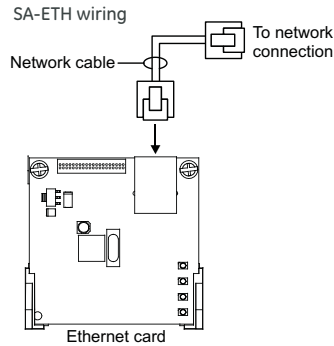

The SA-ETH card provides a standard 10/100 Base T Ethernet network connection for connecting to an intranet, a local network, or the Internet. The card can be used to download configuration programming from the VS-CU to the panel over the network.

The Ethernet card is installed on the plastic assembly and connects to the main circuit board via a ribbon cable.


SA-ETH specifications

| | |
|-----------------------|---|
| Ethernet | 10/100 Base T |
| Operating environment | |
| Temperature | 32 to 120°F (0 to 49°C) |
| Humidity | 0 to 93% RH, noncondensing at 90°F (32°C) |

V-SLC Loop Expander Card

The V-SLC Loop Expander Card provides an additional device loop on the control panel. The card expands the control panel's device capacity to 500 total device addresses, 250 per loop. The card is compatible with Class B or Class A wiring. It is compatible with VS2 control panels only.

The loop expander card connects to connector J7 on the main circuit board.

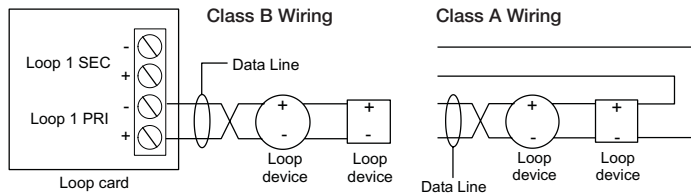


V-SLC specifications

| | |
|--------------------------|---|
| Device addresses on loop | 125 detectors and 125 modules |
| Wiring | Class B (Style Y) or Class A (Style Z) |
| Operating voltage | 20 V peak-to-peak |
| Operating current | 0.5 A total |
| Circuit impedance | 66 Ω, 0.5 μF, max |
| Terminal rating | 12 to 18 AWG (0.75 to 2.5 sq mm) |
| Operating environment | |
| Temperature | 32 to 120°F (0 to 49°C) |
| Humidity | 0 to 93% RH, noncondensing at 90°F (32°C) |

SMK Smoke Power Converter

The SMK Smoke Power Converter Module provides a regulated power source for two-wire smoke circuits connected to a Signature data circuit. The SMK monitors the operating power from the power supply. When power begins to degrade, the SMK provides the necessary operating voltage to the two-wire smoke detection circuits.

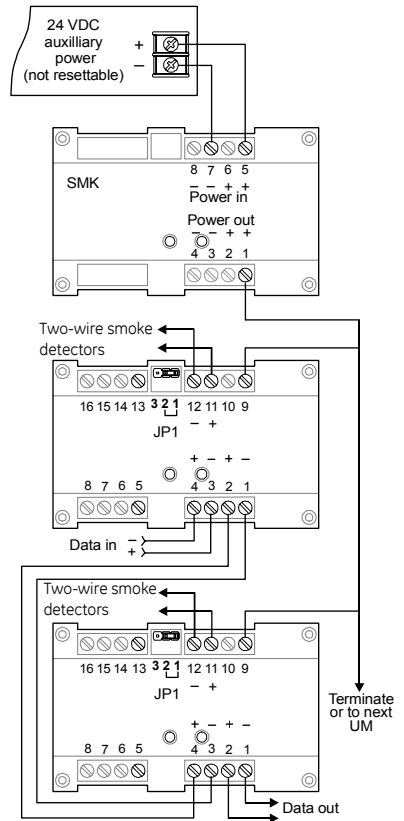


SMK specifications

| | |
|-----------------------------|--|
| Input voltage | 21.9 to 28.3 VDC (not resettable) |
| Output voltage | 24 VDC nom. at 200 mA, max., special applications |
| Ground fault impedance | 10 k ohm |
| Operating environment | |
| Temperature | 32 to 120°F (0 to 49°C) |
| Humidity | 0 to 93% RH, noncondensing at 90°F (32°C) |
| Storage temperature | -4 to 140°F (-20 to 60°C) |
| Compatible electrical boxes | North American 4 inch square x 2-1/2 in. (64 mm) deep 2 gang box or Standard 4 in. square box 1-1/2 in. (38 mm) deep |
| Wire size | 14, 16, or 18 AWG wire (1.5, 1.0, or 0.75 sq. mm) (Sizes 16 and 18 AWG are preferred) |

SA-DACT Dialer

The SA-DACT provides communications between the control panel and the central station over a telephone line system. It transmits system status changes (events) to a compatible digital alarm communicator receiver over the public switched telephone network. The dialer is capable of single, dual, or split reporting of events to two different account and telephone numbers. The modem feature of the SA-DACT can also be used for uploading and downloading panel configuration, history, and current status to a PC running the VS-CU.

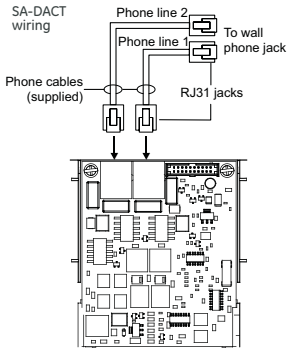

The dialer phone lines connect to connectors on the dialer's main circuit board. Phone line 1 connects to connector J4 and phone line 2 connects to connector J1.

The SA-DACT queues messages and transmits them based on priority (alarm, supervisory, trouble, and monitor). Activations are transmitted before restorations.

The SA-DACT is installed on the plastic assembly and connects to the main circuit board via a ribbon cable.

SA-DACT specifications


| | |
|-----------------------|---|
| Phone line type | One or two loop-start lines on a public, switched network |
| Phone line connector | RJ-31/38X (C31/38X) |
| Communication formats | Contact ID (SIA DC-05) |
| Operating environment | |
| Temperature | 32 to 120°F (0 to 49°C) |
| Humidity | 0 to 93% RH, noncondensing at 90°F (32°C) |

Compatible DACRs

| Receiver | Models | Formats |
|-----------------|---------------|------------|
| Ademco | 685 | Contact ID |
| FBII | CP220 | Contact ID |
| Osborne-Hoffman | OH 2000 | Contact ID |
| Radionics | D6600 | Contact ID |
| Silent Knight | 9800 | Contact ID |
| Sur-Gard | SG-MLR1, MLR2 | Contact ID |

SA-232 RS-232 interface

The SA-232 card provides an RS-232 interface with VS2 panels. It can be used for connecting a printer to the control panel to print system events. The card also can be used for connecting a computer to download a configuration program from the VS-CU to the control panel.

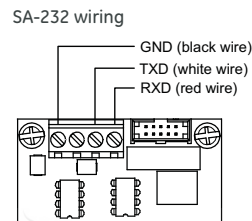

The RS-232 card is installed on the plastic assembly and connects to the main circuit board via a ribbon cable.

SA-232 specifications

| | |
|-----------------------|---|
| Operating voltage | Standard EIA-232 |
| Terminal rating | 12 to 18 AWG (0.75 to 2.5 sq mm) |
| Operating environment | |
| Temperature | 32 to 120°F (0 to 49°C) |
| Humidity | 0 to 93% RH, noncondensing at 90°F (32°C) |


GSA-REL Releasing Module

The GSA-REL is an analog addressable module that communicates directly with the fire alarm panel Signature loop controller. The GSA-REL controls sprinkler, pre-action and deluge systems, and may also be used to release extinguishing agents such as CO₂, Halon, or foam. The module is easily configured in the field and offers a wide range of options that ensure dependable service, while preventing the unnecessary release of extinguishing agent.

GSA-REL specifications

| | | |
|-------------------------------------|-----------------------------|--|
| Power riser | Input voltage | 24 Vdc (power limited) |
| | Supervisory current | 25 mA, max. |
| | Riser input current | 4 amps maximum |
| | Alarm | 170 mA min.; 4 A max. |
| Release circuits | Output rating | 2 A @ 24 Vdc (per circuit) |
| | Valves per circuit | 4 valves, max. |
| | Max. supervisory current | 0.4 mA (short circuit) |
| | Nominal supervisory current | 0.18 mA |
| | Supervisory voltage | 26 Vdc, max. (open circuit) |
| Pre-release alarm circuits | End of line device | 47k Ohm EOL |
| | Output rating | 2 A @ 24 Vdc (for each circuit) |
| | Max. supervisory current | 0.4 mA (short circuit) |
| | Nominal supervisory current | 0.18 mA |
| Manual release input circuit | Supervisory voltage | 26 Vdc, max. (open circuit) |
| | End of line device | 47k Ohm resistor |
| | Circuit type | Class B N.O. latching |
| | Circuit capacitance | 0.1 µF, max |
| | Max. supervisory current | 0.4 mA (short circuit) |
| Abort circuit | Nominal supervisory current | 0.18 mA |
| | Supervisory voltage | 26 Vdc, max. (open circuit) |
| | End of line device | 47k Ohm resistor |
| | Circuit type | Class B N.O. non-latching |
| | Circuit capacitance | 0.1 µF, max |
| First alarm output relay | Contact rating | 3 A @ 24 Vdc (0.6 power factor) Form C |
| | Operating voltage | 5.2 to 19.95 Vdc |
| Signature Data line | Supervisory current | 1000 µA |
| | Alarm current | 1000 µA |

Note: Output circuits are power-limited when the riser circuit is power-limited.

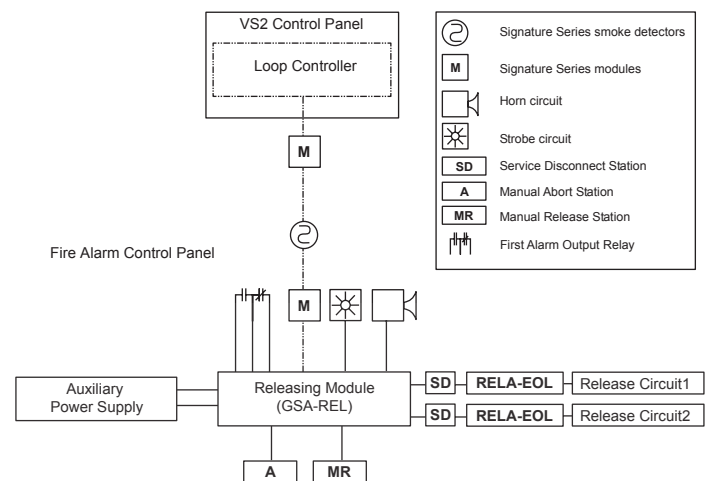

For detailed specification and ordering information on the GSA-REL, refer to Data Sheet M85001-0531 -- Releasing Module.

Specifications

| | | | |
|------------------------------------|---|-----------------------|--|
| Device loops | 1 loop, expandable to 2, Class A or B, each loop supporting up to 250 device addresses | Battery placement | VS2 cabinets accommodate up to 18 A/H batteries. Use a external cabinet for larger battery sizes. |
| NAC circuits | 4 Class B or 2 Class A, 2.5 amps each | Batteries | Batteries must be sealed lead acid type only. Maximum charging capacity = 26 Ah. |
| Power supply | 6.0 A total, 2.5 A max. per circuit at 120/230 VAC 60 Hz 5.0 A total at 230VAC 50 Hz, 2.5 A max. per circuit 0.5 amps aux power | Loop circuit | Maximum loop resistance: 66 Ω. Maximum loop capacitance: 0.5 μF. Style 4, 6, and 7 wiring. 64 isolators maximum. |
| NAC Operating voltage | 24 VDC. NAC minimum voltage: 19.5 VDC @ 20.4 V battery voltage | GSA-UM/GSA-MAB | 1.5 mA (see the UL and ULC compatibility list for for the maximum quantity of detectors per circuit) |
| SLC Loop circuit operating voltage | 20 V peak-to-peak | Compatibility ID | 100 |
| Primary power | 120 VAC, 60 Hz, 230 VAC 50-60 Hz | Alarm contact | Form C 24 VDC @ 1 A (resistive load) |
| Aux Power 1 (Continuous circuit) | 24 VDC nominal at 500 mA. A SMK module is required when using the GSA-UM module to support two-wire smoke detectors. | Trouble contact | Form C 24 VDC @ 1 A (resistive load) |
| Aux Power 2 (Resettable circuit) | 24 VDC nominal at 500 mA. | Supervisory contact | Form A 24 VDC @ 1 A (resistive load) |
| Auxiliary output | 19 to 25.7 VDC | Environmental | Temperature: 0 to 49°C (32 to 120°F). Humidity: 0 to 93% RH, noncondensing. |
| Base panel current draw | Standby: 172 mA Alarm: 267 mA | Terminal rating | All terminals rated for 12 to 18 AWG (0.75 to 2.5 mm ²) |
| Panel History Log | 1,000 events | Serial communications | Voltage: 2.55 V. Current: 30 mA max |
| | | Remote annunciator | 8 drops max, RS-485 Class A or B |
| | | Input zones | 32 max. |
| | | Agency Listing | UL, CSFM, ULC and NYFD #6020 |

Ordering Information

| Part | Description |
|--|--|
| VS2 Intelligent Multi-Loop Systems, 500 analog point capacity | |
| VS2-R | 1 Loop System, 4 NACs, Red door. Surface mount enclosure, 115 Vac, English. |
| VS2-RD | 1 Loop System, two-line dialer, 4 NACs, Red door. Surface mount enclosure, 115 Vac, English. |
| VS2-G | 1 Loop System, 4 NACs, Silver door. Surface mount enclosure, 115 Vac, English. |
| VS2-GD | 1 Loop System, two-line dialer, 4 NACs, Silver door. Surface mount enclosure, 115 Vac, English. |
| VS2-GC ⁽¹⁾ | 1 Loop System, 4 NACs, 16 zone LED display, Silver door. Surface mount enclosure, 115 Vac, English. |
| VS2-G-F ⁽¹⁾ | 1 Loop System, 4 NACs, 16 zone LED display, Silver door. Surface mount enclosure, 115 Vac, French. |
| VS2-G-2 ⁽²⁾ | 1 Loop System, 4 NACs, Silver door. Surface mount enclosure, 230 Vac, English. |
| VS2-R-2 ⁽²⁾ | 1 Loop System, 4 NACs, Red door. Surface mount enclosure, 230 Vac, English. |
| VS2-G-SP ⁽²⁾ | 1 Loop System, 500 point capacity, 4 NACs, silver door. Surface mount enclosure, 115 Vac, Spanish |
| VS2-G-2-SP ⁽²⁾ | 1 Loop System, 500 point capacity, 4 NACs, silver door. Surface mount enclosure, 230 Vac, Spanish |
| VS2-G-PG ⁽²⁾ | 1 Loop System, 500 point capacity, 4 NACs, silver door. Surface mount enclosure, 115 Vac, Portuguese |
| VS2-G-2-PG ⁽²⁾ | 1 Loop System, 500 point capacity, 4 NACs, silver door. Surface mount enclosure, 230 Vac, Portuguese |
| SA-TRIM2 | Flush mount trim, black |

Replacement Electronics

| | |
|------------------------------|--|
| 500elec-VS | Replacement Base electronics, Vigilant, 500pt system, includes main board, base plate, User interface and 1 loop. |
| 500elec-VS-FR ⁽¹⁾ | Replacement Base electronics, Vigilant, 500pt system, includes main board, base plate, User interface and 1 loop, French |
| 500elec-VS-SP ⁽²⁾ | Replacement Base electronics, Vigilant, 500pt system, includes main board, base plate, User interface and 1 loop, Spanish |
| 500elec-VS-PG ⁽²⁾ | Replacement Base electronics, Vigilant, 500pt system, includes main board, base plate, User interface and 1 loop, Portuguese |

Option Cards

| | |
|---------|--|
| SA-DACT | Dual Line Dialer/Modem, supports 4/2 and Contact ID, mounts in cabinet on base plate. |
| SA-232 | Serial Port (RS-232), for connection to printers & computers, mounts in cabinet to base plate |
| SA-ETH | Ethernet Port, Slave, mounts in cabinet on base plate |
| V-SLC | SLC Loop Expansion Module. Adds second loop to VS2 systems, 250 point capacity. Mounts in cabinet on main board. |
| D16L-VS | LED Annunciator Module, 16 groups, 2 LEDs per group with insertable labeling. Mounts in cabinet on VS2 systems. |

Remote Annunciators (refer to Data Sheet 85005-0128)**LCD Remote Annunciators (mount to standard 4" square electrical box)**

| | |
|--------------------------|---|
| RLCD | Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Off-white housing. |
| RLCD-R | Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Red housing. |
| RLCD-C | Remote Annunciator, 4X20 LCD. Common controls and status indicators. Off-white housing. |
| RLCD-CR | Remote Annunciator, 4X20 LCD. Common controls and status indicators. Red housing. |
| RLCDF ⁽¹⁾ | Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Off-white housing. |
| RLCD-CF ⁽¹⁾ | Remote Annunciator, 4X20 LCD. Common controls and status indicators. Off-white housing. |
| RLCD-SP ⁽²⁾ | Remote Annunciator, 4X20 LCD. Common system status indicators. Off-white housing. Spanish. |
| RLCD-PG ⁽²⁾ | Remote Annunciator, 4X20 LCD. Common system status indicators. Off-white housing. Portuguese. |
| RLCD-C-SP ⁽²⁾ | Remote Annunciator, 4X20 LCD. Common controls and status indicators. Off-white housing. Spanish. |
| RLCD-C-PG ⁽²⁾ | Remote Annunciator, 4X20 LCD. Common controls and status indicators. Off-white housing. Portuguese. |

LED Remote Annunciators & Expander (mount to standard 4" square electrical box)

| | |
|--------------------------|---|
| RLED-C | Remote Annunciator. Common controls and status indicators with 16 X 2-LED groups for zone display. Off-white housing. |
| RLED-CR | Remote Annunciator. Common controls and status indicators with 16 X 2-LED groups for zone display. Red housing. |
| RLED-CF ⁽¹⁾ | Remote Annunciator. Common controls and status indicators with 16 X 2-LED groups for zone display. Off-white housing. French. |
| RLED-C-SP ⁽²⁾ | Remote Annunciator, common controls and status indicators. 16 groups w/2 LEDs each for zone display. Off-white housing. Spanish. |
| RLED-C-PG ⁽²⁾ | Remote Annunciator, common controls and status indicators. 16 groups w/2 LEDs each for zone display. Off-white housing. Portuguese. |
| RLED24 | Remote Annunciator Zone expander. 24 X 2-LED groups with custom label areas for display of alarm and trouble. Off-white housing. |
| RLED24R | Remote Annunciator Zone expander. 24 X 2-LED groups with custom label areas for display of alarm and trouble. Red housing. |

Remote Annunciator Cabinets & Accessories

| | |
|---------|--|
| RA-ENC1 | Remote Annunciator Enclosure, key locked with plexiglass window for one RLCD(C) or RLED(C). |
| RA-ENC2 | Remote Annunciator Enclosure, key locked with plexiglass window with space for 2 of either RLCDx, RLEDx or RLED24. |
| RA-ENC3 | Remote Annunciator Enclosure, key locked with plexiglass window with space for 3 of either RLCDx, RLEDx or RLED25. |
| RKEY | Keyswitch, single gang, provides key operated enable or disable of common controls on RLCD or RLED units. |
| LSRA-SB | Surface Mount Box - for R Series single units. |

Graphic Annunciator Drivers (comes with a snap track for mounting in custom graphic enclosures)

| | |
|-----|---|
| GCI | Provides outputs for common indicators and 32 alarm/supv zones as well as inputs for common switches. |
|-----|---|

Programming Tools

| | |
|--------|---|
| VS-CU | Vigilant VS Series configuration and diagnostics utility. |
| 260097 | RS232 cable, 4 conductor, DB9 PC interface |

Notes: ⁽¹⁾ Available in Canada only. ⁽²⁾ Available in international markets only.

Analog Addressable Detectors and Bases

| | | Shipping Wt. |
|---------|---|--------------|
| V-PHS | Intelligent Analog Optical/Fixed Temperature Detector | 0.25 (0.11) |
| V-PS | Intelligent Analog Optical Smoke Detector | 0.25 (0.11) |
| V-HRD | Intelligent Analog Rate-of-Rise Heat Detector | 0.25 (0.11) |
| V-HFD | Intelligent Analog Fixed Temperature Heat Detector | 0.25 (0.11) |
| GSA-SD | Intelligent Analog Duct Detector | 2.4 (1.1) |
| B4U | Standard Base | 0.11 (0.05) |
| RB4U | Relay Detector Base | 0.11 (0.05) |
| IB4U | Isolator Detector Base | 0.11 (0.05) |
| SB4U | Audible (Sounder) Detector Base | 0.11 (0.05) |
| AB4G-SB | Surface Box for Audible Base | 1.0 (0.45) |
| RLED | Remote alarm LED, use with standard base only | 0.2 (.09) |

System Accessories

| | | Shipping Wt. |
|-----------|---|--------------|
| CTM | City Tie Module. Mounts in 2-gang electric box. Provides connection to a local energy fire alarm box. | 0.6 (0.3) |
| BC-1 | Battery Cabinet. 14.0" x 18.25" x 7.25" Free-standing cabinet with key lock. Supports up to 40 Ah batteries. Holds up to 2 12V24A batteries. | 50.0 (22.7) |
| BC-1R | Battery Cabinet - Red. 14.0" x 18.25" x 7.25" Free standing cabinet with key lock. Supports up to 40 Ah batteries. Holds up to 2 12V24A batteries. | 50.0 (22.7) |
| BC-1EQ | Seismic hardening Kit for VS series panels. Includes battery hardening for BC-1 enclosure and components to harden panel internal components. See note. | |
| IOP3A | Isolator Module - RS232. For use with short haul modems. | 1.61 (0.7) |
| RPM | Reverse Polarity Module | 3.0 (1.36) |
| MFC-A | Multifunction Fire Cabinet, 8" x 14" x 3.5" - RED. | 20.6 (9.4) |
| MIR-PRT/S | System Printer - Desktop style. | 36.6 (16.6) |

| Analog Addressable Modules | | Shipping Wt. |
|----------------------------|--|--------------|
| GSA-CC1 | Single Input Signal Module (Standard Mount) | 0.5 (0.23) |
| GSA-MCC1 | Single Input Signal Module (UIO Mount) | 0.18 (0.08) |
| GSA-CC1S | Synchronization Output Module (Standard Mount) | 0.5 (0.23) |
| GSA-MCC1S | Synchronization Output Module (UIO Mount) | 0.18 (0.08) |
| GSA-CC2 | Dual Input Signal Module (Standard Mount) | 0.5 (0.23) |
| GSA-MCC2 | Dual Input Signal Module (UIO Mount) | 0.18 (0.08) |
| GSA-CR | Control Relay Module (Standard Mount) | 0.4 (0.15) |
| GSA-MCR | Control Relay Module (UIO Mount) | 0.18 (0.08) |
| GSA-CRR | Polarity Reversal Relay Module (Standard Mount) | 0.4 (0.15) |
| GSA-MCRR | Polarity Reversal Relay Module (UIO Mount) | 0.18 (0.08) |
| GSA-RM1 | Riser Monitor Module (Standard Mount) | 0.5 (0.23) |
| GSA-MRM1 | Riser Monitor Module (Plug-in) | 0.18 (0.08) |
| GSA-IO | Input/Output Module (Standard Mount) | 0.34 (0.15) |
| GSA-MIO | Input/Output Module (Plug-in) | 0.22 (0.10) |
| GSA-CT1 | Single Input Module | 0.4 (0.15) |
| GSA-CT2 | Dual Input Module | 0.4 (0.15) |
| GSA-MCT2 | Dual Input Plug-in (UIO) Module | 0.1 (0.05) |
| GSA-IM | Fault Isolator Module | 0.5 (0.23) |
| GSA-MM1 | Monitor Module | 0.4 (0.15) |
| GSA-REL | Analog addressable releasing module | 0.5 (0.23) |
| 276A-REL | Manual releasing station (single-action). English markings, black text on yellow polycarbonate body. | 1.0 (0.45) |
| 278A-REL | Manual releasing station (double-action). English markings, black text on yellow polycarbonate body. | 1.0 (0.45) |
| RELA-ABT | Manual Abort Station. English markings, black text on yellow polycarbonate body. | 1.0 (0.45) |
| RELA-SRV-1 | Service Disconnect Switch. One n/c contact and one n/o contact. English markings, white text on blue polycarbonate body. | 1.0 (0.45) |
| RELA-EOL | Polarized end-of-line relay. English markings on stainless steel cover. | 0.2 (0.1) |
| GSA-WTM | Waterflow/Tamper Module | 0.4 (0.15) |
| SMK | Smoke Power Converter Module | 0.4 (0.15) |

Note:

For earthquake anchorage, including detailed mounting weights and center of gravity detail, please refer to Seismic Application Guide 3101987-EN. Approval of panel anchorage to site structure may require local AHJ, structural, or civil engineer review.

Standby batteries must be mounted externally from fire panel in separately mounted BC-1 enclosure. Order BC-1 and BC-1EQ separately.



Detection & alarm since 1872

U.S./Canada
T 888 244 9979
F 866-503-3996

Southeast Asia
T +65 6391 9300
F +65 6391 9306

India
T : +91 80 4344 2000
F : +91 80 4344 2050

Europe
T +32 2 725 11 20
F +32 2 721 86 13

Latin America
T 305 593 4301
F 305 593 4300

utcfireandsecurity.com

© 2012 UTC Fire & Security.
All rights reserved.
